 



SMITH & NOBLE

STEP BY STEP INSTALLATION INSTRUCTIONS

Sheer Shadings

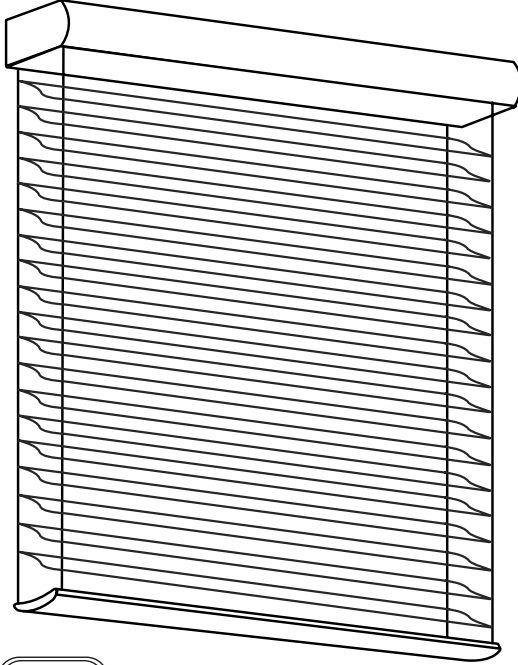

Motivia®
Motorization
Remote Control

Everything You Need

A Smooth Set-Up

We want you to love your new window coverings and that includes having a smooth installation experience. We recommend saving this guide. If you encounter any difficulties or questions, please reach out to us for help. It's why we're here. Call us at 800.248.8888 for more info on installation.

We recommend you hold on to all packaging until your window coverings are fully installed. Should something go wrong (we strongly doubt it), we want any potential returns to be as painless as possible.

Customer Service Hours

Monday – Friday: 6am – 7pm PT

Saturday – Sunday: 7am – 4pm PT

smithandnoble.com



Table of Contents

<i>Step 1 -</i>	Getting Started	3
<i>Overview -</i>	Motorization with Remote Control	4
<i>Step 2 -</i>	Mounting the Brackets	5 - 6
<i>Step 3 -</i>	Hanging the Shade	7
<i>Step 4 -</i>	Link the Remote	8
<i>Step 5 -</i>	Operating the Shade	9
<i>Step 6 -</i>	Optional – Advanced Programming	10
<i>Step 7 -</i>	Hold down brackets	11
<i>Step 8 -</i>	Skew Adjustment	12
<i>Step 9 -</i>	Recharging the Shade	12
<i>Step 10 -</i>	Replacing the Battery	13
	Care & Cleaning Instructions	14
	Safety	14
	Troubleshooting	14
	Warranty	Back Cover

Getting Started









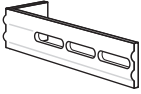
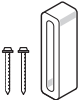
First, make sure you have all the parts and tools required to install your shades.

ALL THE HARDWARE YOU'LL NEED:



Pencil, screw-driver, ¼" nut driver, level, and a drill with a ⅛" drill bit.

Then find wooden studs where you'll want to attach the brackets; if you need to mount your shades to wallboard or plaster, use a secure fastener designed for hollow wall applications. For metal surfaces, pre-drill holes and use the included screws. For concrete, stone, brick, or tile surfaces, use a masonry drill and appropriate plugs, anchors, or screws.

It's important when selecting a fastener to make sure it's designed to support the weight of the shade. Follow the fastener manufacturer's instruction from there on out.

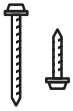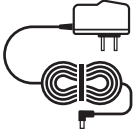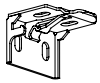 <p>POWER DRILL (NOT INCLUDED)</p>	 <p>SCREW DRIVER (NOT INCLUDED)</p>	 <p>PENCIL (NOT INCLUDED)</p>	 <p>LEVEL (NOT INCLUDED)</p>
<p>Parts</p>  <p>SCREWS</p>		 <p>CHARGER</p>	
 <p>MOUNTING BRACKETS</p>		 <p>HOLD DOWN BRACKET (OPTIONAL)</p>	
 <p>EXTENSION BRACKET (OPTIONAL)</p>		 <p>SPACER BLOCKS (OPTIONAL)</p>	

Motorization with Remote Control

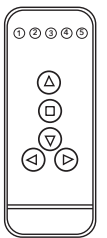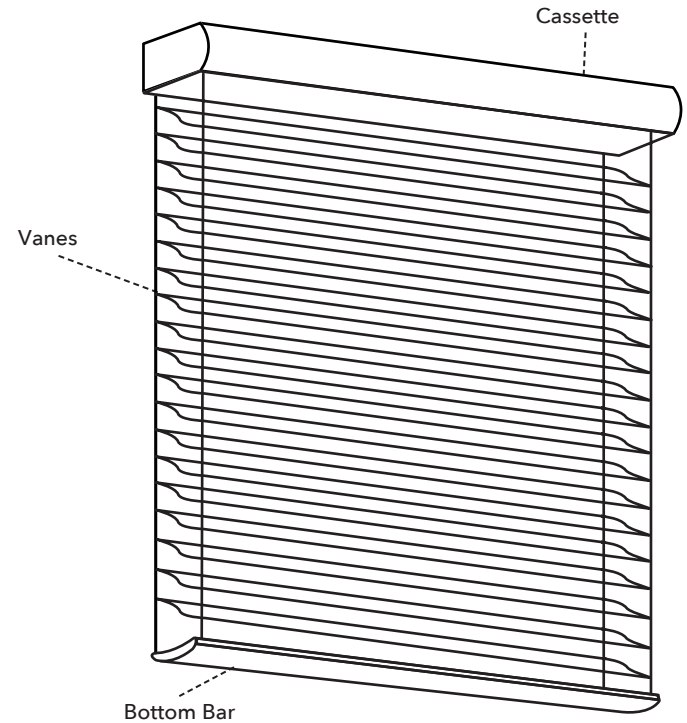

Remote Control


Step 2 – Mounting Brackets

Shadings are shipped with the required number of brackets for proper installation. End brackets should be located approximately 3" from either end. Depending on the width of the shading, additional brackets may be necessary, evenly spaced between the two end brackets.

Using the installation bracket as a template, measure to the edge of the bracket and mark the hole locations with a pencil for drilling.

Brackets must be in line and level. Shim brackets on inside mounts if necessary. The headrail must be level for the shading to operate properly.


BRACKET QTY	SHADE WIDTH
2	up to 40"
3	40 $\frac{1}{8}$ " – 72"
4	72 $\frac{1}{8}$ " – 84"
5	84 $\frac{1}{8}$ " and up

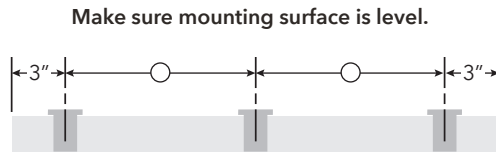

Inside Mount


Mount the brackets to the top of the window frame and 3" in from the edge of the window frame.

The minimum mounting depth is 1". A minimum of 3 $\frac{3}{4}$ " is needed to fully recess the shade. Make sure the brackets are aligned with one another. Attach each bracket using two screws.

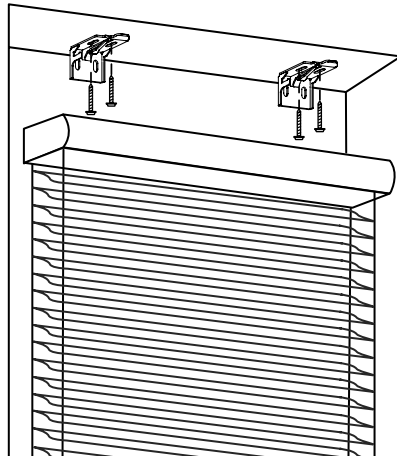

Side Mount (Optional)

Measure from window sill up to desired mounting position on each side of the window frame. Mark position. Mount Side Mount Brackets on each side of window frame as shown. Make sure to confirm that headrail will sit perfectly level. Once Side Mount Brackets are installed and properly positioned, attach the Brackets using the nuts and bolts provided.

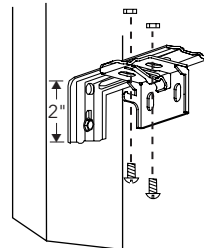


Step 2 – Mounting Brackets

Outside Mount

Center the shading over the window opening at the desired height. Mark the position of the ends of the headrail on the wall. Attach the mounting brackets to the wall, 3" in from the end, where your marks are on the wall. Make sure the mounting brackets are level with one another. Minimum mounting height is 1".


If more brackets are required space them equally between the two existing brackets, making sure they are all level with one another. Attach each bracket using two screws.

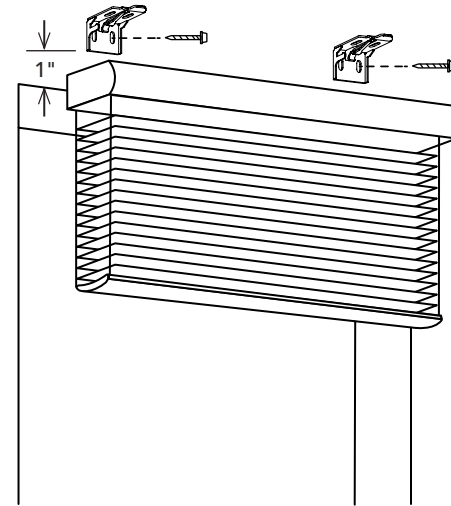

Spacer Blocks | Outside Mount (Optional)


Each spacer block projects brackets $\frac{3}{8}$ " away from mounting surface. Make sure the brackets are level and aligned.

Attach using two screws. Screws should be long enough to secure the bracket to the mounting surface.

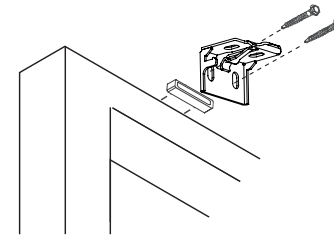

Extension Bracket | Outside Mount (Optional)

Optional Extension Brackets are used to project the back of the shading up to 2 $\frac{1}{2}$ " from the mounting surface. Attach the mounting bracket to the extension bracket with the nut and bolt provided.

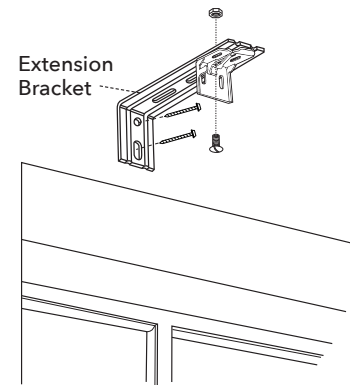


Step 3 – Hanging the Shade

Hanging the Shade


With brackets installed, place the top of the headrail flat against the base of the mounting brackets.

Push the headrail straight back into the brackets until it's fully engaged. The headrail will snap into place. Be sure the motor power wire is not pinched by the bracket.

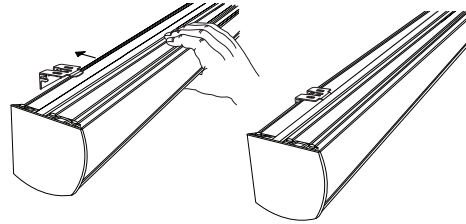

Removing the Shade

To remove the shade, partially lower the shade and insert a flat head screwdriver as shown. Twist the screwdriver until the headrail disengages from the bracket. As you release the brackets, support the headrail to keep it from falling.

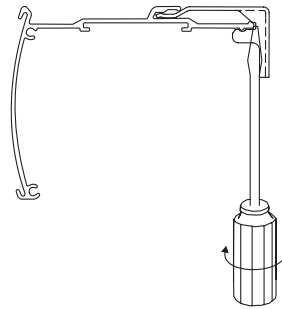





Step 4 – Link the Remote

Link the Remote Control

For added protection, your remote control arrived with a protective film on the top. Please remove this film prior to use.

The remote control has multiple channels. Before linking the remote, determine which shade(s) you want on which channel. The standard remote has 5 channels. All shades linked to the remote will also automatically be programmed to the "ALL" channel.

1. Press the SETTING button on the motor until the shade jogs once. Release the button immediately after the first jog - this should not be more than 3 seconds.
2. Repeat this step for all shades that will be controlled by the same channel.
3. Select the channel that you want to program using the CHANNEL selector button.
4. Press and hold the CONFIRM button until the shade(s) jogs once. The shade is now linked to the remote.
5. Repeat steps 1-3 to program the rest of the shades.

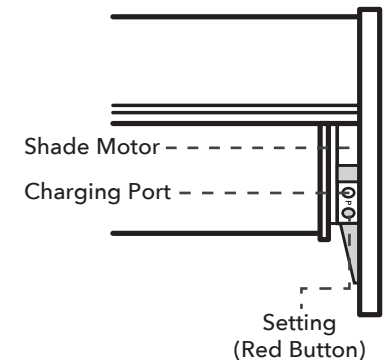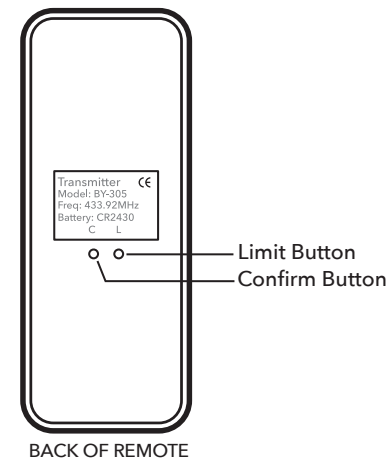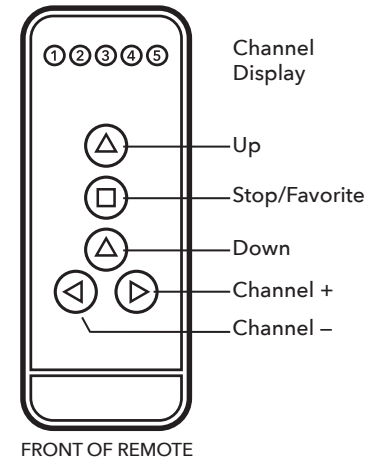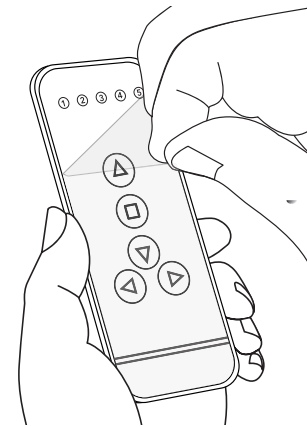

Step 5 – Operating the Shade

Remote Control

Select the desired channel with the CHANNEL key. The channel indicator light will illuminate the channel that is on. If all 5 lights are lit, the remote will control all 5 channels at once.

Tapping the UP or DOWN keys for less than 2 seconds will move the shade in short steps. Holding the UP or DOWN keys down for more than 2 seconds before releasing, will operate the shade in the faster standard speed.



Press the UP or DOWN keys to raise or lower the shade. Press the STOP key to stop the shade anywhere along the window.

Setting and Using a Favorite Position:

NOTE: When adding a favorite position to one shade, the other shades on that channel need to be temporarily unlinked from the remote. To unlink a shade, press and hold the SETTING button until it completes one jog - jog/jog cycle and then release the SETTING button. Repeat for all other shades on that channel.

Use the UP or DOWN buttons to position the shade at the desired *favorite* position. While holding the LIMIT button press and hold the UP button. Release both buttons when the shade jogs. When complete, relink *turned off* shades by following Step 4 - Link the Remote.

With the shade at either the upper or lower limit, simply press the STOP/Favorite button to bring the shade to the *favorite* position. To go to the *favorite* position from any other location, make sure the shade has been stopped for

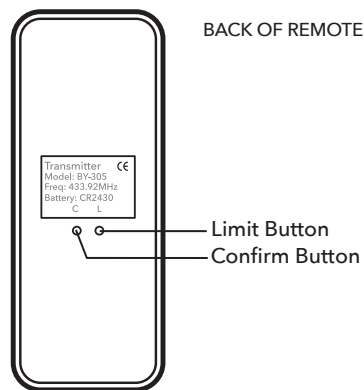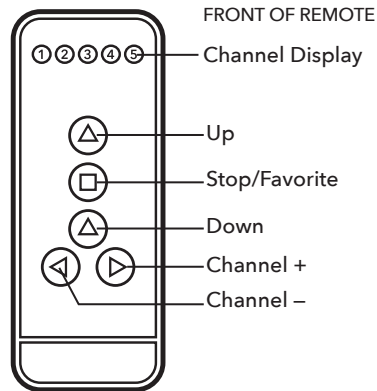

at least three seconds before pressing the STOP button.


Changing a Favorite Position

Unlink all other shades on the same channel before changing/erasing the favorite position.

Use the UP or DOWN buttons to position the shade at the desired *favorite* position. While holding the LIMIT button quickly press and hold the UP button. Release both buttons when the shade jogs.

To erase a favorite position, bring the shade to the *upper* limit. Press and hold the LIMIT button on the back of the remote, then press and hold the UP button. Release both buttons when the shade jogs.

Step 6 - Advanced Programming (optional)

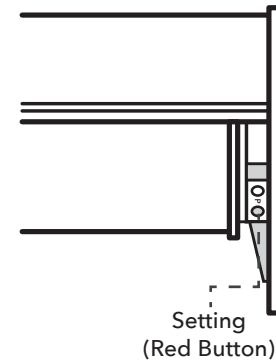

Replace the Original Remote, Add Additional Remote or Add Shade to an Additional Channel

1) Press the SETTING button on the motor until the shade jogs once. Release the button immediately after the first jog -this should not be more than 3 seconds.

2) Repeat this step for all shades that will be controlled by a single channel.

3) Select the channel that you want to program using the CHANNEL selector button.

4) Press and hold the CONFIRM button until the shade(s) jogs once.

5) Repeat steps 1-4 to program the rest of the channels on a multi-channel remote.

Remove a Shade from a Remote or Channel and Link to a Different Remote or Channel

1) Press and hold the SETTING until it completes one jog-jog/jog cycle.

2) Release the SETTING button. The original remote or channels have been unlinked.



Link the motor to the new remote or channel. Follow the steps for replacing the remote above.

Step 7 - Hold Down Bracket


Attaching Hold Down Bracket (Optional)

Lower the shading, keeping the vanes closed.


- Place the magnetic hold-down bracket onto the bottom rail just inside the end cap.
- Hold the bracket while opening and closing the vanes (it may be necessary to have someone assist you). Adjust the bracket to the best overall position.
- Mark the screw location using the mounting options. The screw should be placed in the middle of the slot. This will allow for adjustment.
- Drill the screw holes using a $\frac{3}{32}$ " drill bit.
IMPORTANT: Use drywall anchors when mounting into drywall.
- Attach the hold-down brackets to the mounting surface using the screws provided.
- If necessary, adjust bracket height by loosening the screw and sliding the bracket up or down.

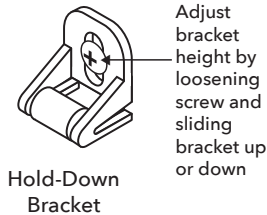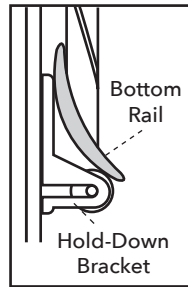

Outside Mount

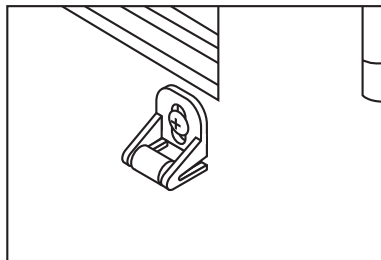


Preferred

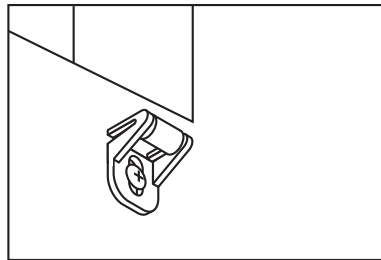


Alternate

Inside Mount

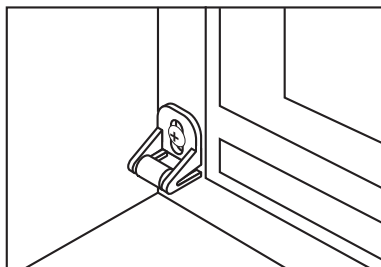

Preferred

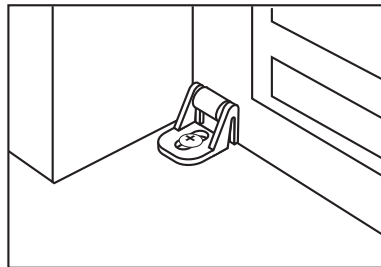

Alternate


Step 8 - Skew Adjustment

Skew Adjustment (If Necessary)

If the fabric is moving to one side as the shade is raised up (skewing), first check that the installation brackets are level. Shim to level, if necessary. If the brackets are level it may be necessary to adjust the bottom rail weight.

- To release the weight clip, insert a flat blade screwdriver into the weight clip and turn clockwise.
- Move the weight in 1" increments toward the side where the fabric is gathering.
- Secure the weight clips in position by turning them counter clockwise after making the adjustment.
- Test and, if necessary, adjust again.

If these suggestions don't work, then please give us a call or visit our website.

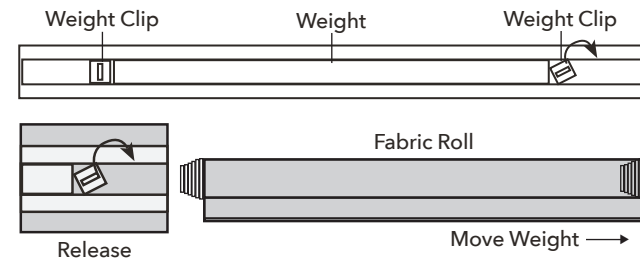

Step 9 - Charging the Motor

Recharging the Motor


When the shade begins to operate slower than normal it is time to charge the motor.

Plug the 8.4v charger into the port motor. Plug the charger into an electrical outlet.

A red light on the charger indicates that the motor is charging.

To fully charge the batteries, allow the batteries to charge for at least 1 hour after the light on the charger turns green.


A typical charge cycle can take between 4-6 hours.

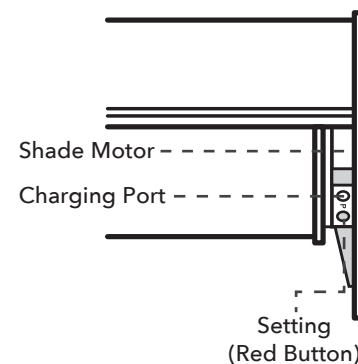

Remote

Remove the battery tray from the remote by inserting a fingernail into the indentation on the back of the remote. To avoid the battery falling out of the remote, remove the tray while the remote is face up.

Insert the new battery (CR2430 lithium) into the battery tray so that the writing is facing up (positive up) when the remote is face up. Slide the tray back into the remote.

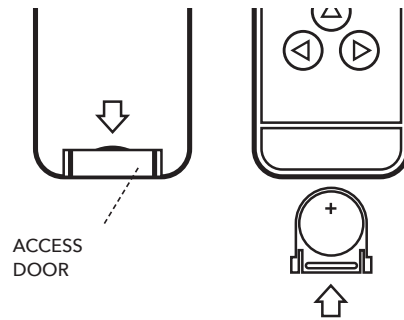

ACCESS
DOOR

Care & Cleaning

Minimal care and cleaning is needed to maintain the beauty of your shades.

To Vacuum: Use a hand-held vacuum with low suction for a more thorough cleaning to keep your shades looking fresh and neat.

To Dust: Use feather duster. fresh and neat.

Safety First. Style Second To None™.

Great style should never come at the cost of safety. Every Smith & Noble window treatment conforms strictly to today's safety standards, including permanent tie-down devices and built-in cord stops. To protect young children and pets, there's no better way to eliminate risk than to use one of our Motivia motorized products.



Troubleshooting

PROBLEM	SOLUTION
The shade does not work or runs slowly.	Recharge the motor.
The shade only goes in one direction (up or down).	The limit setting was unsuccessful and needs to be reset. Refer to the Motorization Guide.
The indicator light on the remote does not shine or the remote-controlling range becomes shorter.	Replace the battery in the remote (CR2430 Lithium).

If these suggestions don't work, then please give us a call or visit our website.

Warranty Service

The enjoyment of your window coverings should be everlasting, which is why our products come with a limited lifetime warranty. The warranty applies to the original owner, requires a proof of purchase and covers defects in material or craftsmanship. Shades or blinds must have been properly installed. We reserve the right to determine if your window covering warrants a repair or a replacement. In need of warranty service? Call us at 800.248.8888 and we'll arrange for a repair or replacement ASAP.
