



MOLLY BOLT



SCREWS (INCLUDED)


NOTE: When installing screws with a drill, be careful not to over-tighten. This may cause the screw to break off in the wall or window frame.



SELF DRILLING ANCHOR



TOGGLE BOLT

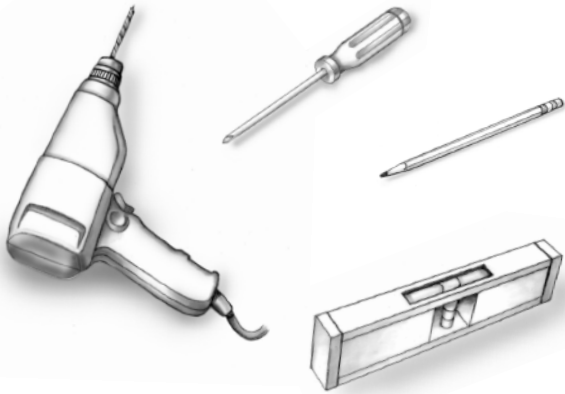

For assistance, call Smith+Noble Customer Service at **800.780.8889** 5am to 7pm, Mon-Fri and 7am to 4pm, Sat-Sun Pacific time. Visit our web site at **smithnoble.com**

Warranty

All Smith+Noble hardware is designed for a lifetime of trouble-free use and is covered by a limited lifetime warranty. This warranty applies to the original customer/installation with proof of purchase and covers any defects in materials or workmanship provided that the product is measured and installed according to the product instructions.

In the unlikely event that warranty service is ever needed, simply call Customer Service at **800.780.8889**. Our customer service representatives will arrange for a repair as quickly as possible.


Item SN1094-02/07

Customer Service 800.780.8889 or visit us online at smithnoble.com

smith+noble®


America's Leading Resource for Window Treatments™

Step by Step Installation for:
Wrought Iron Hardware

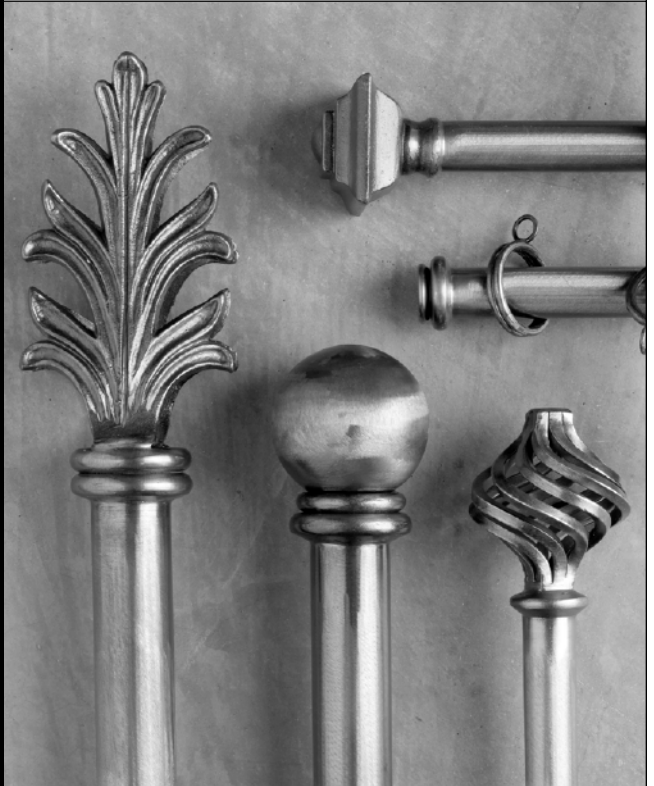


THANK YOU for purchasing from Smith+Noble. Your new hardware has been custom crafted from the highest quality materials. Once installed, your hardware will provide you with a lifetime of beauty and trouble-free use.

INSTALLING your new hardware is easy. Simply follow our step-by-step instructions. We recommend that you read through all the instructions before you start. If you have questions, our customer service representatives are available from 5am to 7pm Mon-Fri and 7am to 4pm Sat-Sun Pacific time at 800.780.8889.

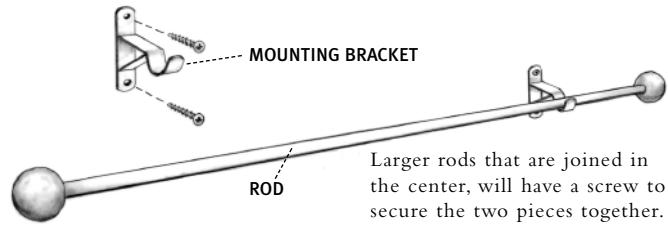

OUTSIDE MOUNT WROUGHT IRON ROD AND BRACKETS

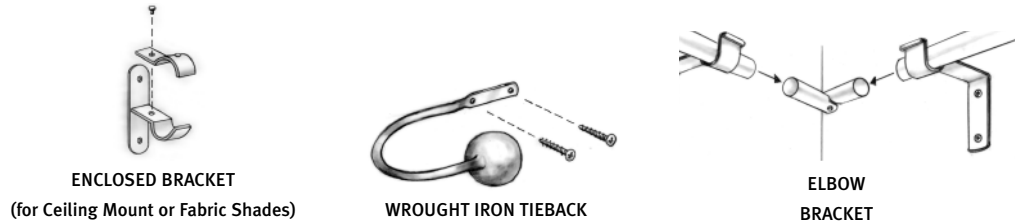

GETTING STARTED

REMOVE the hardware from the packaging.

Do not dispose of packaging until the hardware is operating to your satisfaction.

Check the diagram to make sure you have all the parts indicated for the appropriate type of installation.

TOOLS you may need to install your hardware: pencil, screwdriver, 1/4" nut driver, level, pliers and a drill with 3/4" drill bit.

Your brackets must be securely attached to the mounting surface. When screwing into a surface, the included screws must hit wood studs. Otherwise, use a secure fastener as illustrated (not included).

WALLBOARD OR PLASTER: Use a secure fastener designed for hollow wall applications.


METAL: Pre-drill holes and use sheet metal screws.

CONCRETE, STONE, BRICK OR TILE: Use a masonry drill and appropriate plugs, anchors or screws.

*When selecting a fastener, make sure it is designed to support the weight of the product being installed. Follow the fastener manufacturer's instructions for proper installation of the fastener.


OUTSIDE MOUNT

WROUGHT IRON DOUBLE ROD AND BRACKETS

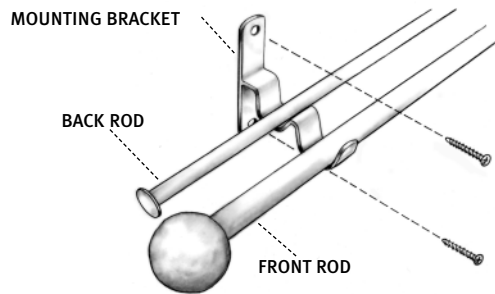

Use Caution when placing the rod into the brackets, as the rod connector could separate and cause damage or injury. Once the rod is installed, make sure it is securely held in place.

INSIDE MOUNT WROUGHT IRON ROD AND BRACKETS

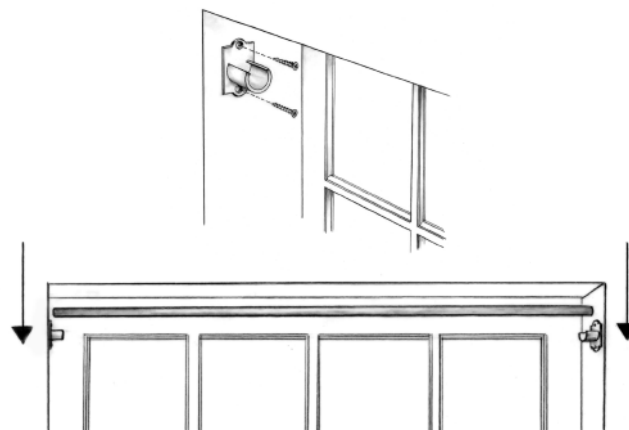

Using a pencil, mark the position on both sides of the window frame where the mounting plates will be attached. The height is determined by the window treatment being placed on the rod. Attach with the screws provided making sure the mounting plates are aligned and level with one another. Each side of the rod can now be dropped into the mounting plates.