


SMITH & NOBLE

STEP BY STEP INSTALLATION INSTRUCTIONS

Rod Pocket Top & Bottom

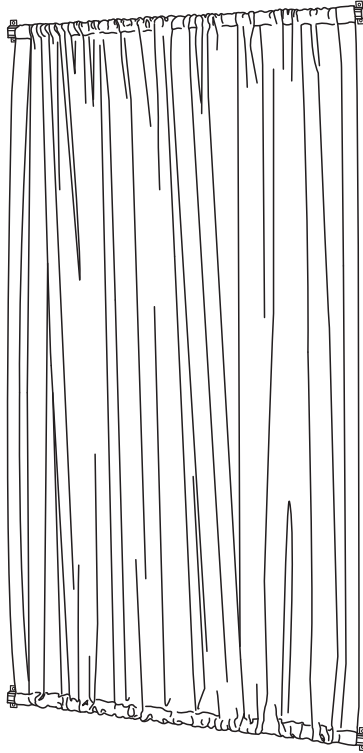

Wall or Door Mount

Everything You Need

A Smooth Set-Up

We want you to love your new window coverings and that includes having a smooth installation experience. If you encounter any difficulties or questions, please reach out to us for help. It's why we're here. Call us at 800.248.8888 or visit www.smithandnoble.com/knowhow for more info on installation.

We recommend you hold on to all packaging until your window coverings are fully installed. Should something go wrong (we strongly doubt it), we want any potential returns to be a painless as possible.

Customer Service Hours

Monday – Friday: 6am – 7pm PT

Saturday – Sunday: 7am – 4pm PT

smithandnoble.com



Table of Contents

<i>Step 1 -</i>	Getting Started	3
<i>Overview -</i>	4
<i>Step 2 -</i>	Mounting the Brackets	5
<i>Step 3 -</i>	Hanging Panel.	5
	Care & Cleaning Instructions	6
	Safety	6
	Warranty.	Back Cover

Getting Started


First, make sure you have all the parts and tools required to install your panels.

ALL THE HARDWARE YOU'LL NEED:


Pencil, screw-driver, ¼" nut driver, level, and a drill with a ⅛" drill bit.

Then find wooden studs where you'll want to attach the brackets; if you need to mount your hardware to wallboard or plaster, use a secure fastener designed for hollow wall applications. For metal surfaces, pre-drill holes and use the included screws. For concrete, stone, brick, or tile surfaces, use a masonry drill and appropriate plugs, anchors, or screws.

It's important when selecting a fastener to make sure it's designed to support the weight of the window treatment. Follow the fastener manufacturer's instruction from there on out.

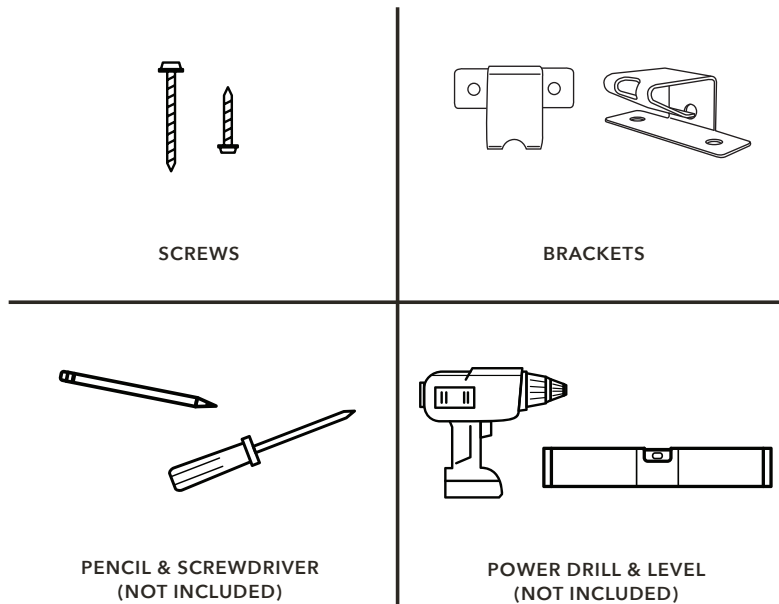


Rod Pocket Top & Bottom Panels

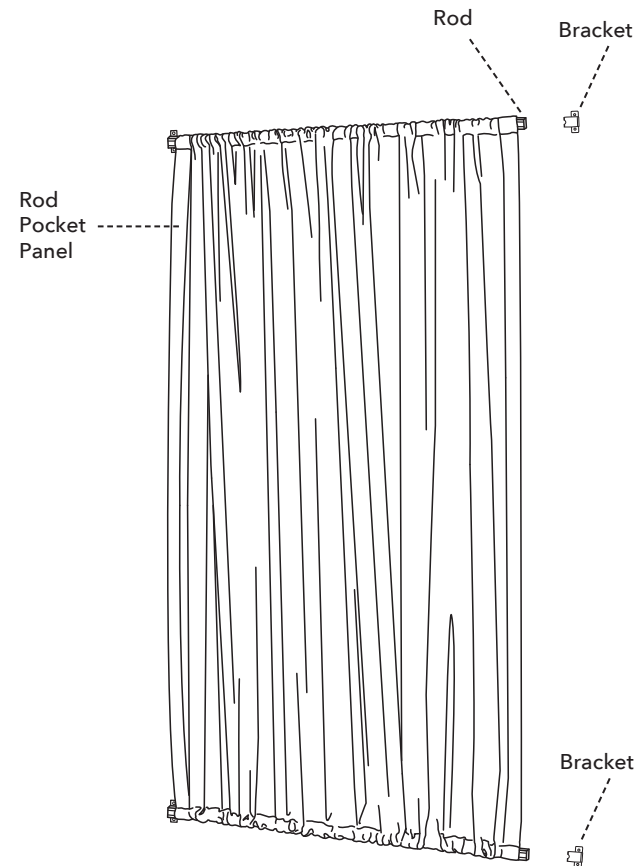

Step 2 – Mounting Brackets

Mount Brackets

First, place the bracket on the rod then hold the rod above the window so that it's perfectly centered. Using a pencil, mark where the brackets will be placed, then place the provided brackets to door or wall, where they will be mounted. When you determine bracket placement, make sure fabric is taught and that the panel will not interfere with a handle if mounting on a door. Attach mounting brackets with screws provided to the top and bottom of door or wall (Figure A). 2" beyond the edge of the window frame. Make sure the brackets are aligned with one another.

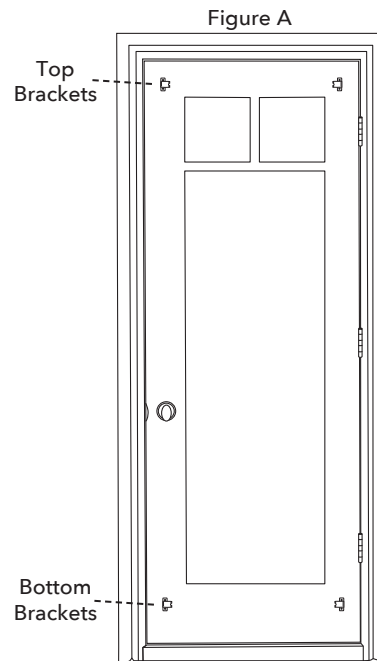

Care, Cleaning & Safety


Care & Cleaning

Use brush or dust head attachment. Occasional light vacuuming with a soft bristle attachment or gentle feather dusting is all that is required to keep your panels looking fresh and neat.

Step 3 – Hanging Panel

Hanging Panel

Run the rod through your panel, starting with the top and attach rod to bracket to hang panel. (Figure B).

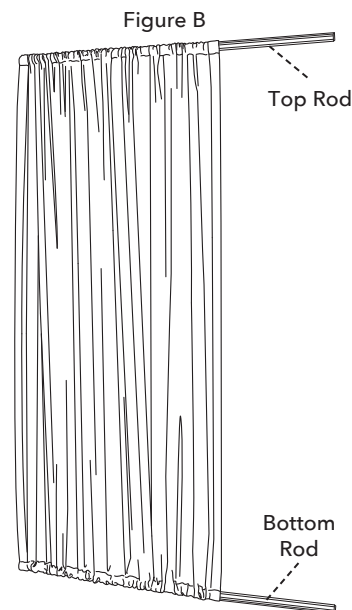

Warranty Service

The enjoyment of your window coverings should be everlasting, which is why our products come with a limited lifetime warranty. The warranty applies to the original owner, requires a proof of purchase and covers defects in material or craftsmanship. Shades or blinds must have been properly installed. We reserve the right to determine if your window covering warrants a repair or a replacement. In need of warranty service? Call us at 800.248.8888 and we'll arrange for a repair or replacement ASAP.
