


SMITH & NOBLE

STEP BY STEP INSTALLATION INSTRUCTIONS

Cosmopolitan Grand Hardware

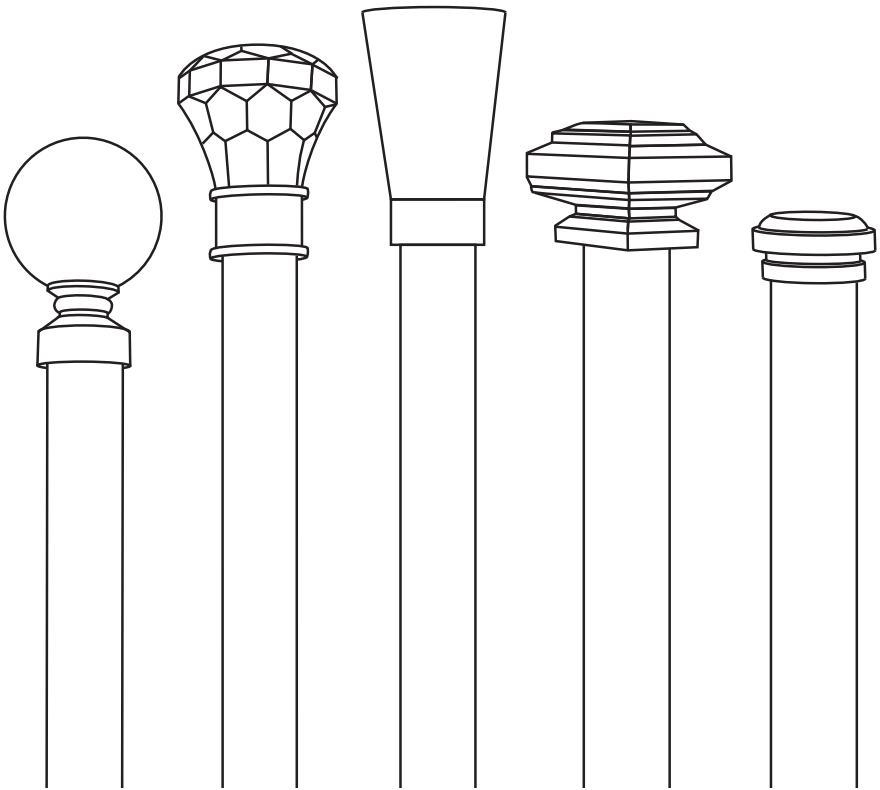

Inside Mount
Single Rod Set

Everything You Need

A Smooth Set-Up

We want you to love your new hardware and that includes having a smooth installation experience. We suggest saving this guide. If you encounter any difficulties or questions, please reach out to us for help. It's why we're here. Call us at **800.248.8888** for more info on installation.

We recommend you hold on to all packaging until your hardware is fully installed. Should something go wrong (we strongly doubt it), we want any potential returns to be a painless as possible.

Customer Service Hours

Monday – Friday: 6am – 6pm PT

Saturday – Sunday: 7am – 4pm PT

smithandnoble.com



Table of Contents

<i>Step 1 -</i>	Getting Started	3
<i>Overview -</i>	Inside Mount Single Rod Set	4
	Attaching Ring Hooks to Rings	4
<i>Step 2 -</i>	Mounting the Brackets	5
<i>Step 3 -</i>	Securing Rod to Brackets	6
Accessories	7 - 8
Care & Cleaning	9
Warranty	Back Cover

Parts and Tools

Before you begin, check the accompanying diagram to make sure you have all the parts you need. You'll need to make sure the surface you intend to install your hardware is sturdy enough to accommodate the brackets. If you're screwing directly into a surface this means locating wood studs that are strong enough to securely bond with the included screws. Otherwise, you'll need to use a secure fastener (as illustrated) but please note this piece is not included.



WALLBOARD OR PLASTER: Hollow wall applications: Use a secure fastener designed specifically for this purpose.

METAL: Prepare by pre-drilling holes and then using the included screws.


CONCRETE, STONE, BRICK OR TILE: Use a masonry drill and surface-specific plugs, anchors, or screws. When selecting a fastener be sure it's designed to support the weight of the product being installed (if you're not sure, either give us a call or ask a professional at your local hardware store). Once obtained, follow the fastener manufacturer's instructions regarding proper installation.

TOOLS YOU WILL NEED TO INSTALL YOUR HARDWARE: Pencil, screwdriver, 1/4" nut driver, level, and a drill with a 7/64" drill bit.

Note: It's important to monitor the amount of pressure you apply when using a drill. If the screws are too tight this may cause the screw itself to break off in the wall or window frame.


<p>SCREWS</p>	<p>MOUNTING BRACKETS</p>
<p>PENCIL & SCREWDRIVER (NOT INCLUDED)</p>	<p>RINGS</p>
<p>PENCIL & SCREWDRIVER (NOT INCLUDED)</p>	<p>RING HOOKS</p>

Inside Mount Single Rod Set

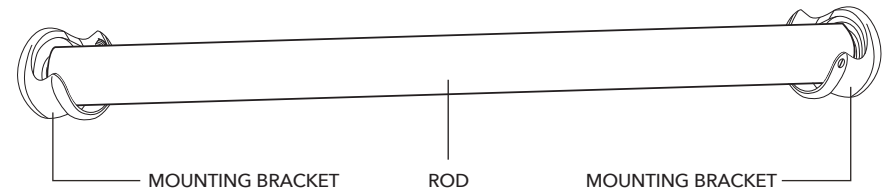


ROD QTY	BRACKET QTY	ROD WIDTH
1	2	12"– 72"

Attach Ring Hook to Ring

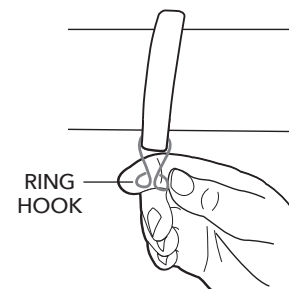

Place a ring hook on the ring and squeeze both ends of ring hook together so that the two holes are on top of each other.

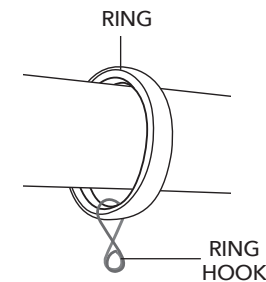


Step 2 – Mounting the Brackets

Inside Mount


STEP 1:

Place the panel on the rod. To ensure it drapes at the correct length, hold it up to the spot you wish to install it; this will allow you to raise or lower your treatment as desired. After you've located the ideal location, use a pencil to mark the wall where the top of the rod is resting.

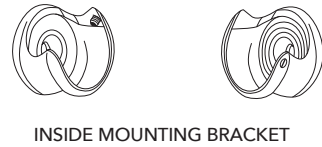

STEP 2:

Remove the panel from the rod and then center the rod over the window opening at the desired height. Using the pencil, mark where the ends of each rod are positioned on both sides of the window frame where the brackets will be attached.

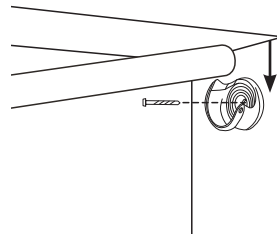


STEP 3:

Make sure the brackets are aligned and level with one another.


STEP 4:

Position the inside mounting bracket with the openface end facing upward, and the set screw in the back. Attach it with the screws provided.

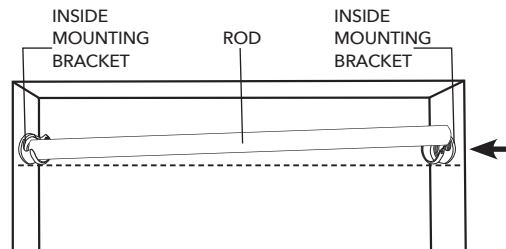

STEP 5:

Once both brackets are installed and level, simply place the hardware rod into the inside mounting bracket. Tighten set screw to hold rod in place.

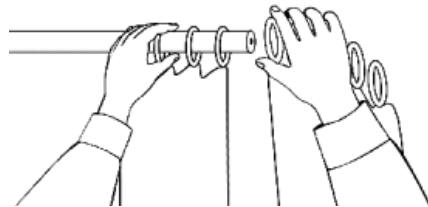

NOTE:


If your treatment requires rings they need to be placed onto the rod before installing it into the brackets.

Step 3 - Securing Rod to Brackets

Securing Rod to Brackets


STEP 1:

Once the rod has been placed on the brackets, secure the rod in place by tightening the bracket set screw.

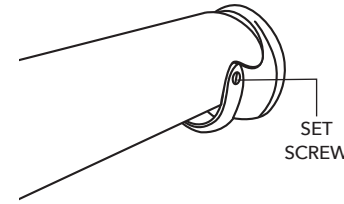

Baton/Wand (optional)

After your hardware is installed, attach the baton to the eyelet of the first ring by the clip.

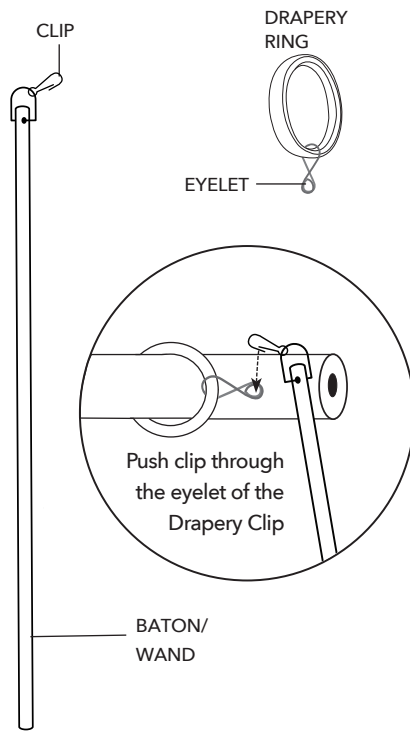

Tiebacks (optional)

STEP 1


In order to locate where to install your tiebacks, measure the height of the window and divide this by two.

Using the previous calculation, mark that spot on the wall with a pencil. To ensure you like the way the panel drapes, gather one side and sweep it over to the approximate proposed location.

Once you're sure the tieback is in the perfect location, use your pencil to mark the spot to install it.

Measure the distance from the bottom or top of the window to the tieback to mark the other side and ensure they're even.

Now hold the tieback hardware on the wall at the desired location and rest a level above it, adjusting it until it's straight.

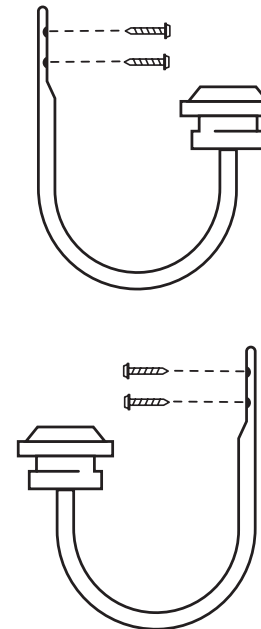

STEP 2

Place tieback level against wall in the desired location and attach to the wall. Repeat for next one, if you are using multiple tiebacks.

Care & Cleaning

Minimal care and cleaning is needed to maintain the beauty of your Hardware.

To Vacuum: Use brush or dust head attachment.

To Dust: Use soft, clean cloth.

Warranty Service

The enjoyment of your hardware should be everlasting, which is why our products come with a limited lifetime warranty. The warranty applies to the original owner, requires a proof of purchase (hang on to your receipt!) and covers defects in material or craftsmanship. Hardware must have been properly installed. We reserve the right to determine if your hardware warrants a repair or a replacement. Visit smithandnoble.com/guarantee to see full details. In need of warranty service? Call us at 800.248.8888 and we'll arrange for a repair or replacement ASAP.
